



# SLB Branch Office Manager Quick Start Guide

## WHAT'S INSIDE



Quick Start Guide



SLB

### Accessories Included

Part Number	Description
200.2066A	Adapter: RJ45 to DB25M (DCE) for Sun with DB25 female
200.2067A	Adapter: RJ45 to DB25F (DCE) for Sun with DB25 male and some HP9000's
200.2069A	Adapter: RJ45 to DB9M (DCE) for SGI Onyx
200.2070A	Adapter: RJ45 to DB9F (DCE) for HP9000, SGI Origin, IBM RS6000, and PC-based Unix/Linux servers
ADP010104-01	Adapter: RJ45 Rolled serial, 0.1m (0.33 Ft.) for Cisco and Sun Netra
200.0063	Cable: RJ45 to RJ45, Cat-5, 2m (6.6 Ft.)
500-153	Cable: RJ45 Loopback

 
### Power Cords Included

Included power cords vary for kit purchased. Please see [www.lantronix.com](http://www.lantronix.com) for additional inlet power cords available.


SLB Part #	Power Cord Part #	Power Cord Description	Quantity
<b>100-120 VAC (50/60 Hz)</b>			
SLB882KIT-15P	SLPP12310-01	IEC60320/C19 to NEMA 5-15P (15A)	2
SLB882KIT-20P	SLPP12410-01	IEC60320/C19 to NEMA 5-20P (20A)	2
<b>200-240 VAC (50/60 Hz)</b>			
SLB8824KIT-EU	SLPP12810-01	IEC60320/C19 to Schuko (EU)	2
	SLPP12910-01	IEC60320/C19 to BS1363 (UK)	2
SLB8824KIT-AP	SLPP12A08-01	IEC60320/C19 to AS/NZS 3112 (AU/NZ)	2
	SLPP12C08-01	IEC60320/C19 to CHINA/GB (CN)	2
SLB8824KIT-WW	SLPP12810-01	IEC60320/C19 to Schuko (EU)	1
	SLPP12910-01	IEC60320/C19 to BS1363 (UK)	1
	SLPP12A08-01	IEC60320/C19 to AS/NZS 3112 (AU/NZ)	1
	SLPP12C08-01	IEC60320/C19 to CHINA/GB (CN)	1

## 1 HARDWARE REVIEW

### 100-120V AC

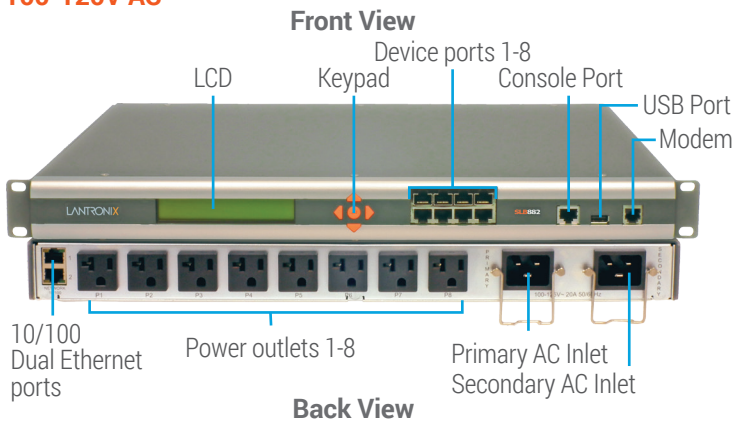

### 200-240V AC

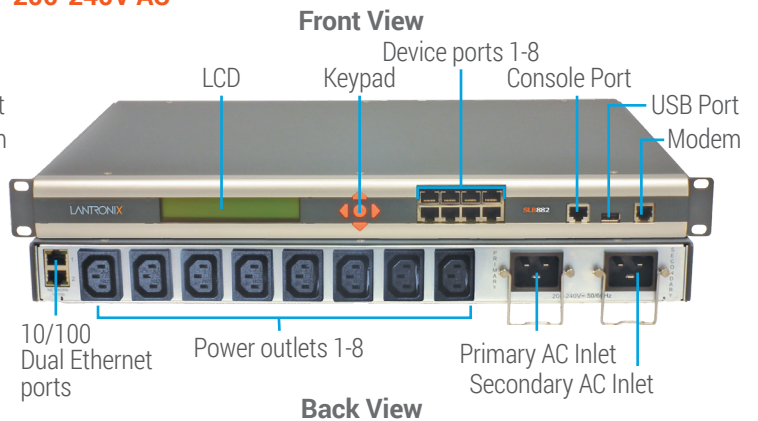 


The SLB is a hybrid console manager and power manager in the form of a space saving 19" 1RU design.

The SLB connects between a server or a piece of IT equipment and an IP network or the Internet. Once installed on the IP network, a remote user connects to the SLB using a secure web browser (HTTPS/SSL), Secure Shell (SSH), or Telnet session. If a modem is used in the SLB, dial-in access is possible in the event that the IP network is unavailable. Once connected, the user has access to the server or IT equipment's command line interface (CLI) via the console port to perform maintenance or management tasks. If the equipment is connected to one of the SLB power outlets, then (on/off/reboot) power control is possible.

The front LCD panel and keypad allows for quick and easy network configuration. The front panel console port allows a dumb terminal or PC with terminal emulation software to locally access management functions and connected serial console devices. The device ports allow simple connections to serial devices using adapters and a standard Cat-5 cable. Connect one end of the Cat-5 cable to the device port, and the other end to an adapter that attaches to the serial console of the target system.

 For example, to connect a PC to the device port of the SLB, you only need the female DB9 adapter (Part #200.2070A) and a standard Cat-5 cable, both of which are supplied with the SLB.

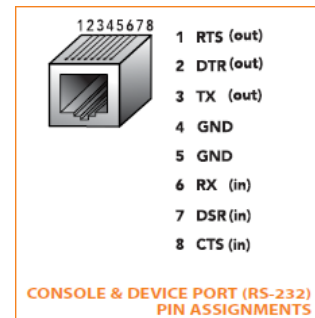

The default communication parameters for the device ports and the console port are:

- 9600 baud • 8 data bits • No parity • 1 stop bit • No flow control

The power outlets allow your equipment to use the SLB as its power source. Once connected you can remotely and securely control the state of each outlet (on/off/reboot).



# SLB Branch Office Manager Quick Start Guide

## 2 INSTALLING THE SLB

1. Install the unit in a 19-inch rack if desirable.  
**Warning:** Be careful not to block the air vents on the sides of the unit. If you mount it in an enclosed rack, we recommend that the rack have a ventilation fan.
2. Connect the SLB directly to the network through the top Ethernet port #1.
3. Connect up to eight serial console devices to the numbered device ports on the front of the unit using the appropriate cables and adapters.
4. To manage a device's power, plug its power cord into one of the eight power outlets.
5. If you are using the modem, connect it to the phone line.
6. Attach single-phase power cords to the primary AC input connector and secondary AC input connector (optional) and apply power.
7. Wait about a minute and a half for the boot process to end. When the boot process ends, the status of each power outlet displays on the LCD display. Detected faults or process messages may also display.

## 3 IP ADDRESSING

Both of the SLB network ports (Eth1 and Eth2) default to DHCP-assigned IP addresses. If you want to assign a different IP address, it must be within a valid range, unique to your network, and with the same subnet mask as your workstation.

To configure the SLB, you need the following information:

IP address (if not already assigned): \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_

Subnet mask (if not already assigned): \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_

Gateway: \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_

DNS: \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_

## 4 CONFIGURING NETWORK (IP) SETTINGS

The fastest way to set basic network parameters is by using the front panel keypad and display.

**Note:** If you prefer, you can get started by following a Quick Setup script on the command line interface using Telnet or SSH, or by connecting a terminal directly to the console (RS-232) port. The web page interface also provides a Quick Setup page.

See **Quick Setup** in the User Guide for instructions.

- Use the **right** and **left arrow** buttons to navigate from one option to another.
- Use the **up** and **down arrow** buttons to navigate between parameters within an option or to increase or decrease a numerical value.
- Use the **Enter** button in the center to enter or exit editing mode and to save changes.

**Note:** If no buttons are pressed for 30 seconds, the front panel display times out without accepting unsaved changes and returns to displaying the hostname and clock.

**For example, to change the IP settings:**

1. Press the **right arrow** button to display the **Network Settings** option and the current IP address.
2. Press the **Enter** button to go into editing mode.



3. Use the **up** and **down arrow** buttons to increment or decrement the IP address indicated by the cursor.
4. Use the **right** and **left arrow** buttons to move to and change the remaining digits of the IP address. Press the **Enter** button to exit editing mode when finished.
5. Press the **down arrow** button to display the **Subnet Mask** setting.
6. Edit the **Subnet Mask** in the same fashion as the IP address and press the **down arrow**.
7. Edit the **Gateway** and **DNS** settings.
8. Press the **down arrow** after the **DNS 3** setting to go to the **Save settings Yes/No** prompt.
9. Select **Yes** at the prompt and press **Enter** to save changes. Repeat steps 1-8 for the other options (console port and date/time). **Note:** Another option, is to restore factory defaults. The default password for this action is 999999. See the SLB User Guide for more details.

After you save the values for your console manager, changes take effect immediately.



# SLB Branch Office Manager Quick Start Guide

## 5 LOGGING INTO THE SLB WEB PAGE

This section includes instructions for accessing both the web page and the command line interfaces. You can use either method to configure all parameters.

To log in to the SLB web page:

1. Open a web browser.
2. In the URL field, type `https://` followed by the IP address of your SLB.
3. At the first login, enter `sysadmin` (all lower case) as the user and `PASS` (all upper case), the default factory password.

The first time you log in, the SLB Quick Setup page displays. Subsequent logins display the SLB Home Page. (To display Quick Setup again, click the Quick Setup tab.)

4. Do one of the following:
  - To bypass the Quick Setup page and go directly to configuring the SLB, click the **Accept default Quick Setup settings** checkbox and click **Apply**.
  - Update basic network parameters, if desired and click **Apply**.

## 6 LOGGING INTO THE COMMAND LINE INTERFACE

### To access the command line interface

1. Do one of the following:
  - With a network connection, use a Telnet or SSH program to Telnet or SSH to `xx.xx.xx.xx` (the IP address in dot quad notation), and press **Enter**. You should be at the login prompt.

**Note:** By default, Telnet is disabled. To enable Telnet, use the Services web page, a serial terminal connection, or an SSH connection.
  - With a serial terminal connection, when the command line displays, press **Enter**.
2. Enter **sysadmin** as the user name and press **Enter**.
3. Enter **PASS** as the password and press **Enter**. The first time you log in, the Quick Setup script opens automatically. Subsequent logins display the command prompt only. (To obtain the Quick Setup script again, use the `admin quicksetup` command.)

**Note:** Change the default password as soon as possible to prevent access by unauthorized personnel. Subsequent logins require the username **sysadmin** and the appropriate password to log in as system administrator.
4. If the Quick Setup script displays, update basic network parameters, as desired. Otherwise, just press **Enter** until the command prompt displays. By pressing **Enter**, you are accepting the current settings.

### Notes:

- For general command line interface help, type `help` command line.
- For help with a specific command, type `help` followed by the command, for example, `help set network` or `help admin firmware`.

### Contact Technical Support

For technical support queries, visit <http://www.lantronix.com/support> or call **North America** (800) 422-7044 Monday – Friday from 6:00 a.m. – 5:00 p.m., Pacific Time, excluding holidays.

**EMEA**  
Tel: +31 (0)20 77 14 424  
Tel: +31 (0)76 52 36 740

**China**  
Tel: +86.021.6237.8868

**Asia/Pacific**  
Tel: +852 3428-2338

**Japan**  
Tel: +81-3-6277-8802

**Latest Firmware** For the latest firmware downloads, visit <http://www.lantronix.com/support/downloads>

**IP Address Assignment Tutorial** To view a tutorial on how to assign an IP address, visit <http://www.lantronix.com/support/tutorials>



# SLB分支机构设备管理器快速入门指南

— 电源分配器(带适配器功能)

## 里面有 什么



快速入门指南



SLB

### 随附配件

件号	描述
200.2066A	适配器:RJ45转DB25M (DCE) 用于带DB25母头的Sun服务器
200.2067A	适配器:RJ45转DB25F (DCE) 用于带DB25公头的Sun服务器和 部分HP9000服务器
200.2069A	适配器:RJ45转DB9M (DCE) 用于SGI Onyx服务器
200.2070A	适配器:RJ45转DB9F (DCE) 用于HP9000、SGI Origin、IBM RS6000 服务器以及基于PC的Unix/Linux 服务器
ADP010104-01	适配器:RJ45超薄串口,0.1米(0.33 尺),用于Cisco和Sun Netra服务器
200.0063	线缆:RJ45到RJ45,5类线, 2米(6.6英尺)。
500-153	线缆:RJ45环回

 
### 电源线随附

所附带的电源线因购买的产品套装不同而有所差别。请参阅 [www.lantronix.com](http://www.lantronix.com), 了解可供使用的其他电源输入线。


SLB 件号	电源线件号	电源线描述	数量
<b>100-120 VAC (50/60 Hz)</b>			
SLB882KIT-15P	SLPP12310-01	IEC60320/C19 至 NEMA 5-15P (15A)	2
SLB882KIT-20P	SLPP12410-01	IEC60320/C19 至 NEMA 5-20P (20A)	2
<b>200-240 VAC (50/60 Hz)</b>			
SLB8824KIT-EU	SLPP12810-01	IEC60320/C19 至 Schuko (EU)	2
	SLPP12910-01	IEC60320/C19 至 BS1363 (UK)	2
SLB8824KIT-AP	SLPP12A08-01	IEC60320/C19 至 AS/NZS 3112 (AU/NZ)	2
	SLPP12C08-01	IEC60320/C19 至 CHINA/GB (CN)	2
SLB8824KIT-WW	SLPP12810-01	IEC60320/C19 至 Schuko (EU)	1
	SLPP12910-01	IEC60320/C19 至 BS1363 (UK)	1
	SLPP12A08-01	IEC60320/C19 至 AS/NZS 3112 (AU/NZ)	1
	SLPP12C08-01	IEC60320/C19 至 CHINA/GB (CN)	1

## 1 硬件评测

### 100-120V AC

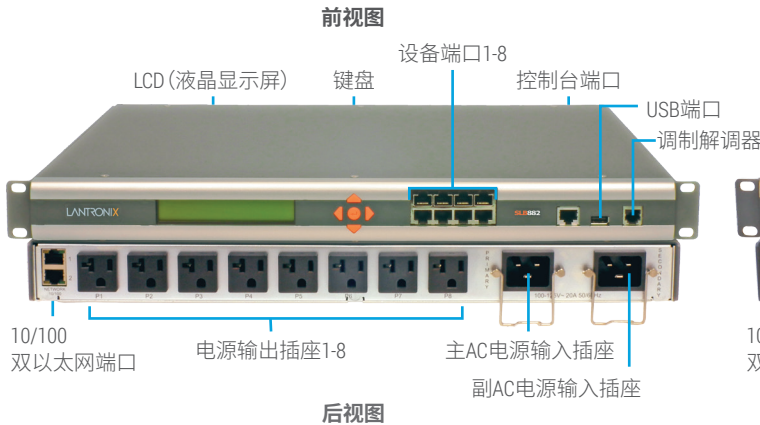

### 200-240V AC

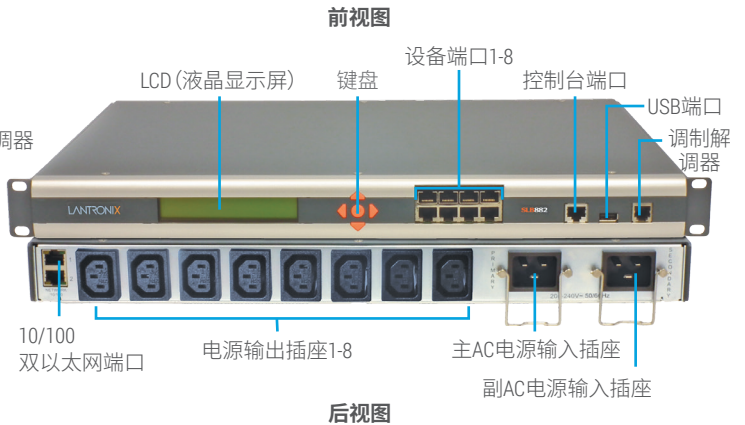 


SLB是一种复合控制台管理器和电源管理器,采用节省空间的19英寸1RU设计。

SLB将服务器或IT设备连接到IP网络或互联网上。一旦安装在IP网络上,远程用户便可以通过安全网络浏览器(HTTPS/SSL)、安全外壳 (SSH) 或Telnet会话连接到SLB。如果SLB中安装了调制解调器,那么在IP网络不可用的情况下可以通过拨号访问。一旦建立连接,用户通过控制台端口可以访问到服务器或IT设备的命令行界面 (CLI), 进而完成维护或管理任务。如果设备连接到SLB的一个电源输出插座上,那么就可以对其电源进行控制(开/关/重启)。

利用前端LCD面板和数字小键盘可以方便快速地进行网络配置。利用前面板上的控制台端口,可以通过一台哑终端或安装有终端仿真软件的PC机实现本地访问管理功能,并对所连接的串行控制台设备进行管理。这些设备端口允许使用适配器和标准5类电缆与串行设备进行简单连接。将5类电缆的一端连接到设备端口上,另一端连接到与目标系统串行控制台相连的适配器上。

 例如,要将一台PC连接到SLB的设备端口上,您只需要DB9母头适配器(件号200.2070A)和一条标准5类电缆,两者均随SLB一起提供。

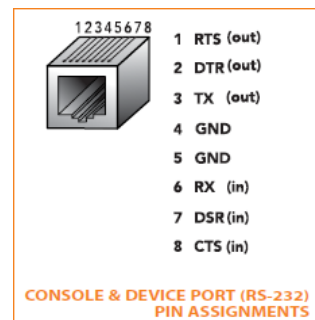

设备端口和控制台端口的默认通信参数如下:

- 9600波特 • 8个数据位 • 无奇偶校验 • 1个停止位 • 无流量控制
- 电源输出插座允许您的设备将SLB作为其电源。一旦建立连接,您便可以远程安全地控制每个插座的状态(开/关/重启)。



# SLB分支机构设备管理器快速入门指南

— 电源分配器(带适配器功能)

## 2 安装SLB

1. 如果需要的话, 可以将设备安装在一个19英寸机架上。

**警告:**小心不要堵住设备两侧的散热孔。如果设备安装在一个封闭的机架上, 建议机架配备一个排风扇。

2. 将SLB通过上方的以太网端口#1直接连接到网络上。

3. 使用合适的电缆和适配器, 最多可以将八台串行控制台设备连接到本设备前面板上带编号的设备端口。

4. 要管理一台设备的电源, 请将其电源线插入到八个电源输出插座中的任一个。

5. 如果您使用调制解调器, 请将其连接到电话线。

6. 将电单相源线连接到主AC电源输入接口和副AC电源输入接口(可选), 并接通电源。

7. 等待约一分半钟左右, 直到启动过程结束。当启动过程结束时, 每个电源输出插座的状态将显示在LCD显示屏上。还可能显示检测到的故障或过程消息。

## 3 IP寻址

SLB的两个网络端口(Eth1和Eth2)默认为由DHCP分配的IP地址。如果您要指定一个不同的IP地址, 那么该地址必须在有效范围内, 并且在您的网络上唯一的, 使用与您的工作站相同的子网掩码。

要配置SLB, 您需要以下信息:

IP地址(若尚未分配): \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_

子网掩码(若尚未分配): \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_

网关: \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_

域名服务器: \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_

## 4 配置网络(IP) 设置

设置基本网络参数的最快捷方法是用前面板上的数字小键盘和显示器。

注: 如果您愿意的话, 您可以通过使用Telnet或SSH从命令行界面上的“快速设置”脚本上手, 或者通过直接将一台终端连接到控制台(RS-232)端口上开始工作。该网页界面还提供了一个“快速设置”页面。

请参见用户指南中“快速设置”中的使用说明。

 
- 使用**向右箭头**和**向左箭头**按钮从一个选项跳到另一个选项。
- 使用**向上箭头**和**向下箭头**按钮在某个选项所对应的各个参数间进行选择, 或者用来增加或减少参数值。
- 使用中间的**“确定”**按钮进入或退出编辑模式并保存更改。

注: 如果30秒内没有按下任何按钮, 那么前面板将显示超时信息, 放弃未保存的更改, 并返回到显示主机名和时钟的画面。

例如, 要更改IP设置:

1. 按**向右箭头**按钮显示“网络设置”选项和当前IP地址。

2. 按**“确定”**按钮进入编辑模式。

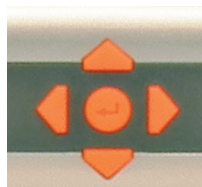

3. 使用**向上箭头**和**向下箭头**按钮来增加或减少由光标指示的IP地址。

4. 使用**向右箭头**和**向左箭头**按钮移至IP地址的其他数位, 然后进行更改。设置完成后, 按**“确定”**按钮退出编辑模式。

5. 按**向下箭头**按钮显示“子网掩码”设置。

6. 按照与IP地址相同的方式编辑“子网掩码”, 然后按**向下箭头**按钮。

7. 编辑“网关”和“域名服务器”设置。

8. 在“域名服务器3”设置之后按**向下箭头**按钮, 跳转到“保存设置是/否”提示。

9. 在该提示符下选择**“是”**, 并按**“确定”**按钮保存更改。

对其他选项(控制台端口和日期/时间)重复步骤1-8。

**注意:**还有一种选择就是恢复出厂默认值。该操作的默认密码为999999。更多详情请参见SLB用户指南。

保存控制台管理器设置后, 更改立即生效。



# SLB分支机构设备管理器快速入门指南

— 电源分配器(带适配器功能)

## 5 登录到SLB网页

本节包含网页访问和命令行两种界面的使用说明。您可以使用任一方法配置全部的参数。

要登录到SLB网页：

1. 打开网络浏览器。
2. 在URL字段中输入https://, 后面加上您的SLB的IP地址。
3. 第一次登录时, 输入sysadmin (全部小写) 作为用户名, 默认的出厂密码为PASS (全部大写)。

当您第一次登录时, 将显示SLB“快速设置”页面。以后登录时将显示SLB主页。(若要再次显示“快速设置”, 请单击“快速设置”选项卡。)

4. 执行下列操作之一：
  - 要绕过“快速设置”页面直接配置SLB, 请点击“**接受默认快速设置**”复选框, 并点击“**应用**”。
  - 如果需要的话, 更新基本网络参数, 然后点击“**应用**”。

## 6 登录到命令行界面

**要访问命令行界面**

1. 执行下列操作之一：
  - 在使用网络连接的情况下, 利用Telnet或SSH程序连接到 **xx.xx.xx.xx** (IP地址点分表示法), 然后按“**确定**”按钮。此时应显示登录提示符。  
**注意:** Telnet默认为禁用。要启用Telnet远程登录, 需要使用“服务”网页、一个串行终端连接或SSH连接
  - 在使用串行终端连接的情况下, 当显示命令行时, 请按“**确定**”。
2. 输入**sysadmin**作为用户名, 然后按“**确定**”。
3. 输入**PASS**作为密码, 然后按“**确定**”。当您第一次登录时, 会自动打开“快速设置”脚本。以后登录时将只显示命令提示符。(若要再次获得“快速设置”脚本, 请使用admin quicksetup命令。)  
**注意:** 请尽快修改默认密码, 以防止未经授权人员访问。以后登录时, 需要输入用户名**sysadmin**和相应的密码, 以系统管理员身份登录。
4. 如果显示“**快速设置**”脚本, 请根据需要更新基本网络参数。否则, 只需按住确定, 直到显示出命令提示符。按确定, 表明您接受当前的设置。

**注意:**

- 如需一般的命令行界面帮助, 请在命令行输入help。
- 如需某个特定命令的帮助, 请输入help, 后面跟该命令, 例如, help set network或 help admin firmware。

### 联系技术支持

如需技术支持咨询, 请访问<http://www.lantronix.com/support>, 或致电**北美**(800)422-7044 (太平洋时间周一至周五上午6:00-下午5:00, 节假日除外)。

**欧洲、中东、非洲地区**  
电话: +31 (0)20 77 14 424  
电话: +31 (0)76 52 36 740

**中国**  
电话: +86.021.6237.8868

**亚洲/太平洋地区**  
电话: +852 3428-2338

**日本**  
电话: +81-3-6277-8802

**最新固件**要下载最新固件, 请访问<http://www.lantronix.com/support/downloads>

**IP地址分配教程**要查看有关如何分配IP地址的教程, 请访问<http://www.lantronix.com/support/tutorials>